


London Taxis International Taxi TX1 Range

L02
Fiche 1

Body Electrics
Battery and Fittings
Battery and Fittings

Illus	Part Number
1	801670
2	608523
2	610005
3	608524
4	8218
5	NL6
	608832

Description	Quantity	Change Point	Remarks
Battery-90 amp-wet	1		
Bar-fixing battery-RHD	1		
Bar-fixing battery-LHD	1		
J bolt-fixing battery	3		
Washer-plain-M6	3		
Nut-hexagonal-nyloc-M6	3		
Pad-anti rattle	4		

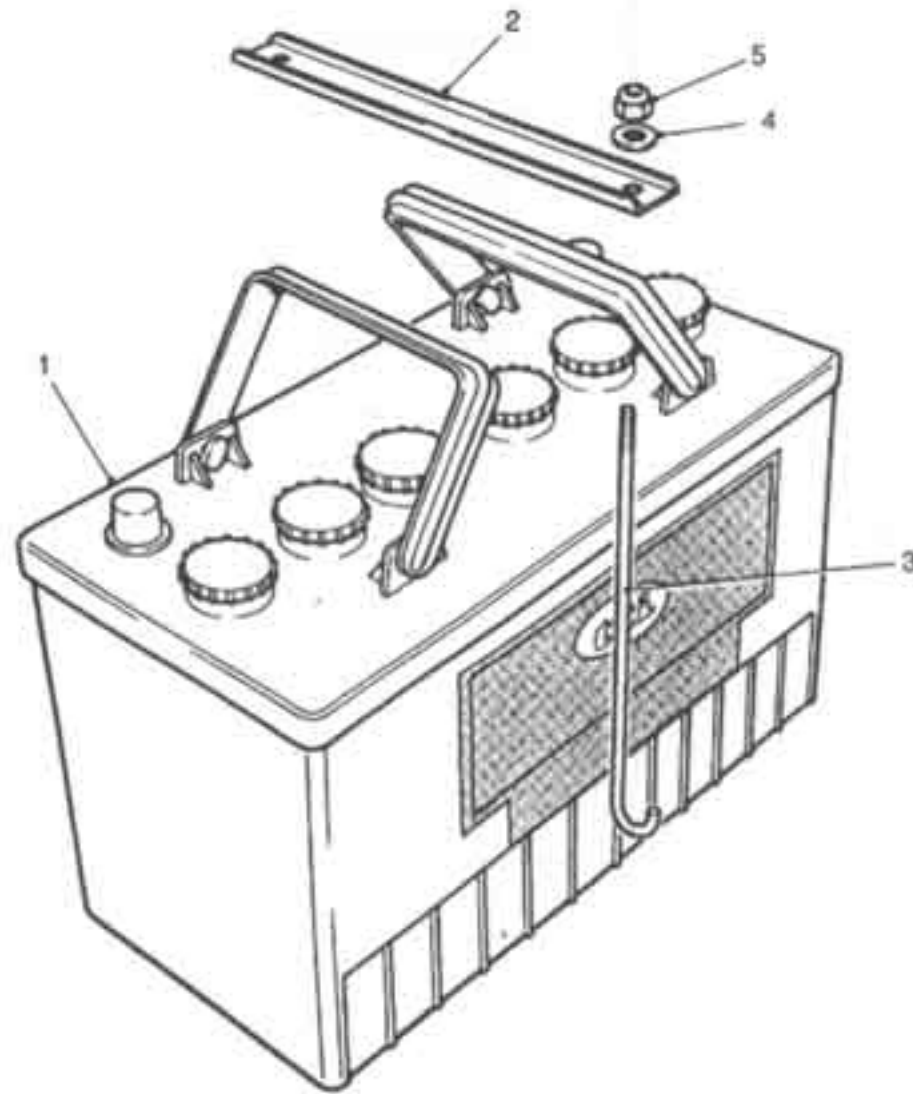

London Taxis International Taxi TX1 Range

L03
Fiche 1

Body Electricals
Battery and Fittings
Battery Cables

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	607919	Cable-battery positive.....	1	Note (1)	
2	609846	Cable-battery positive-RHD.....	1	Note (2)	
3	609521	Cable-battery positive-LHD.....	1		
	603540	Clip-p-10mm.....	2		
	S512HEX	Setscrew-p clip to bracket-M5 x 12.....	2		
	8165	Nut-serrated-M5.....	2		
	600938	Spacer.....	1		
	609067	Clip-battery cable retaining-10mm.....	3		
4	607920	Cable-battery negative.....	1	Note (3)	
5	609445	Cable-battery negative.....	1	Note (4)	
6	609873	Cable-battery negative-body to chassis-RHD.....	1		
7	609522	Cable-battery negative-body to chassis-LHD.....	1		
8	609874	Cable-battery negative-engine to chassis.....	1		
	802402	Setscrew-earth cable to chassis frame-5/16UNF x ..	1		
	JHM2219	Washer-spring-5/16".....	1		
	WPL8H	Washer-plain-M8.....	1		
	N8	Nut-M8.....	1		
	WS8H	Washer-spring-M8.....	1		


CHANGE POINTS:

- (1) To (V) WC 102766
- (2) From (V) WC 102767
- (3) To (V) WC 102061
- (4) From (V) WC 102062

London Taxis International Taxi TX1 Range

L04
Fiche 1

Body Electrics
Alternator and Fittings
Alternator and Vacuum Pump

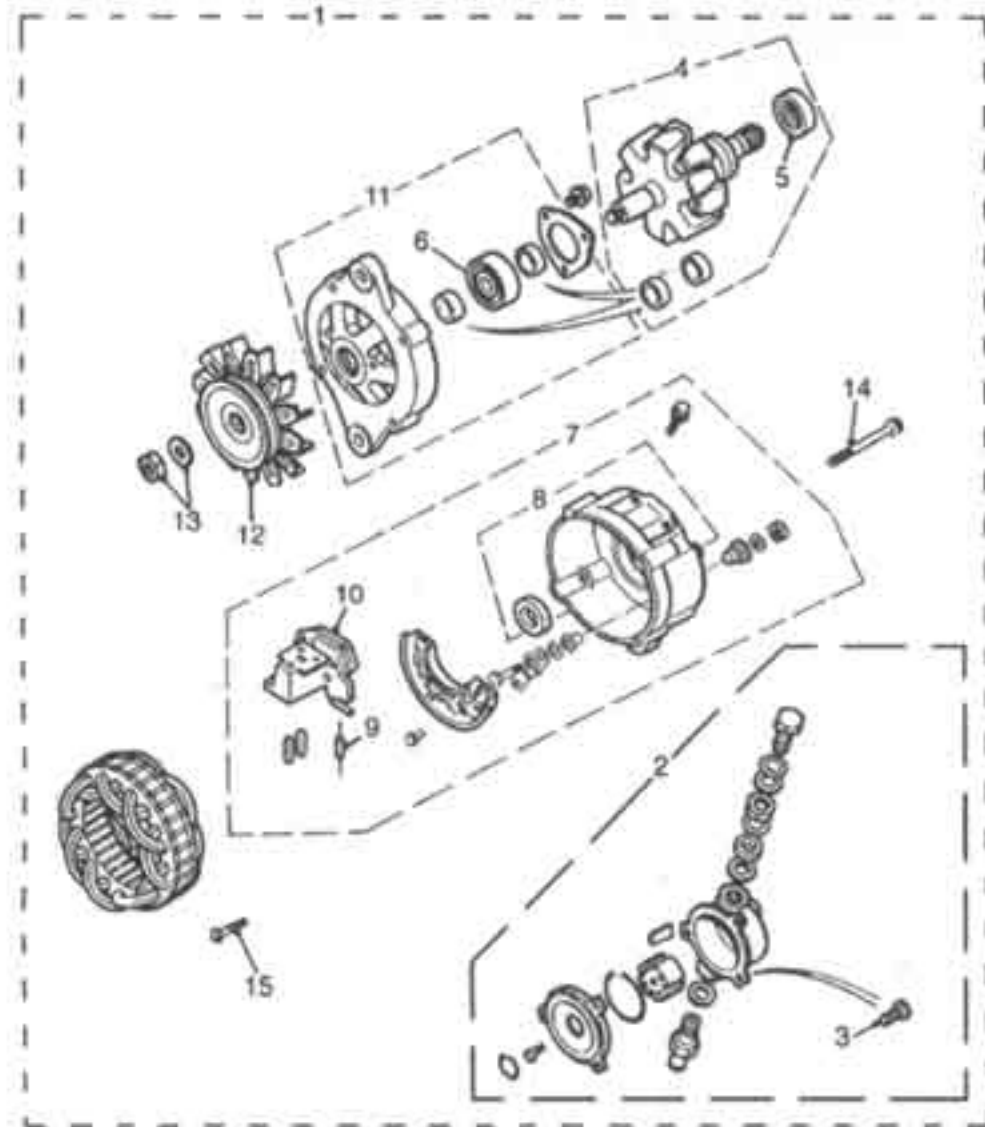


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	801998	ALTERNATOR ASSEMBLY-C/W VACUUM PUMP ...	1	Automatic
1	801998	ALTERNATOR ASSEMBLY-C/W VACUUM PUMP ...	1	Manual EGR
1	801999	ALTERNATOR ASSEMBLY-C/W VACUUM PUMP-MANUAL	1	Non EGR
2	803091	• Pump brake vacuum.....	1	Part of 801998, 801998.
3	800451	• Setscrew.....	1	Part of 801998, 801998, 801998, 801999, 801999.
4	803094	• ROTOR ASSEMBLY ALTERNATOR.....	1	Part of 801998, 801998.
5	803095	•• Bearing-slip ring end alternator.....	1	
7	803097	• COVER ASSEMBLY-ALTERNATOR SLIP RING END	1	
8	803098	•• Cover alternator	1	
9	803101	•• Diode.....	1	
10	803099	•• Regulator assembly alternator-manual	1	
10	803100	•• Regulator assembly alternator-automatic	1	
11	803102	• FRAME ASSEMBLY-ALTERNATOR DRIVE END ..	1	
6	803096	•• Bearing-alternator front.....	1	
12	800448	• Pulley alternator	1	
13	803255	• Nut.....	1	
14	800450	• Bolt.....	4	
3	800451	• Setscrew.....	1	Part of 801998.
2	803090	• Pump brake vacuum.....	1	Part of 801999.
4	803093	• ROTOR ASSEMBLY ALTERNATOR.....	1	Part of 801999.
5	803095	•• Bearing-slip ring end alternator.....	1	

London Taxis International Taxi TX1 Range

L05
Fiche 1

Body Electricals Alternator and Fittings Adjusting Bracket and Pump Connector's

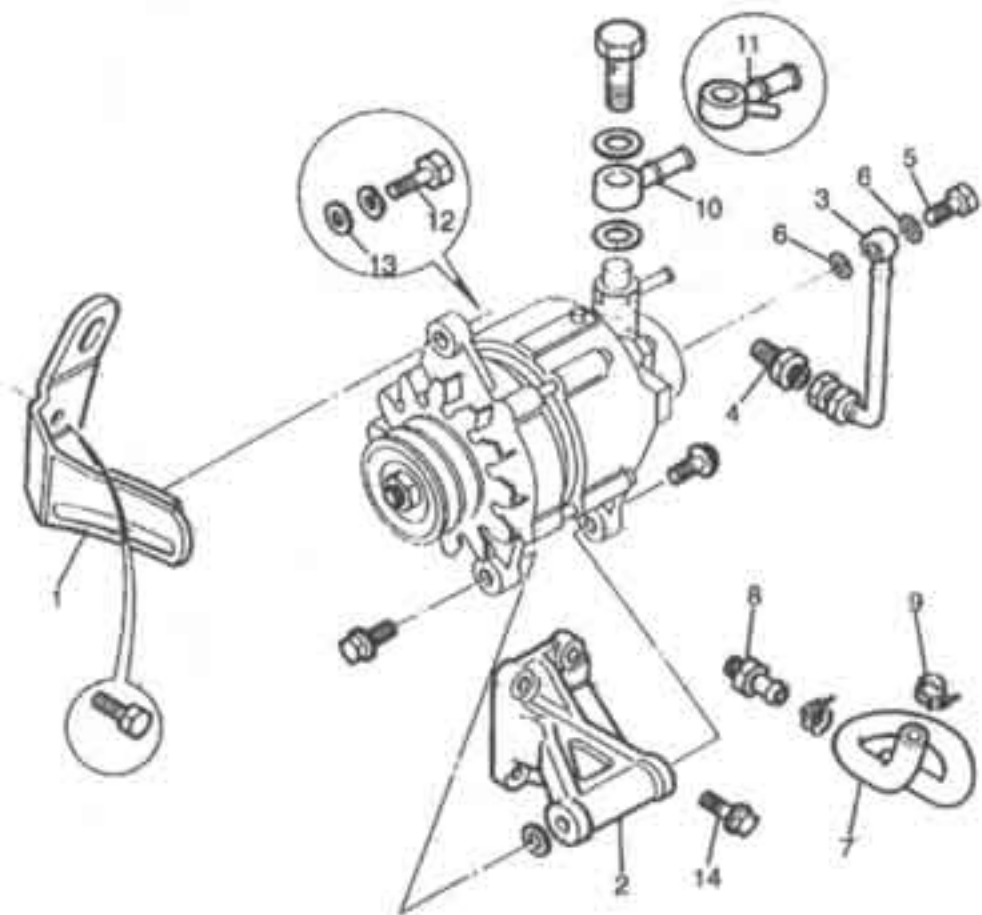


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	803092	Link-adjuster alternator.....	1	Note (1)	
2	800419	Bracket-support alternator.....	1		
3	800420	Pipe-oil feed alternator/vacuum pump.....	1		
4	800421	Connector-oil feed pipe.....	1		
5	800422	Bolt-banjo.....	1		
6	800423	Washer-sealing.....	2		
7	800424	Hose-lower vacuum pump drain.....	1		
8	800425	Connector-straight.....	1		
9	800426	Clip-hose-double wire.....	2		
10	800427	Connector brake vacuum.....	1		Manual Non EGR
10	801141	Connector brake vacuum.....	1		Automatic Non EGR
11	900529	Connector brake vacuum.....	1		EGR
12	800428	Bolt-adjuster link alternator.....	1		
13	800429	Washer-plain.....	1		
14	801041	Bolt.....	3		
	603255	Nut.....	1		
	603256	Washer-spring.....	1		
	603257	Washer-plain.....	1		

London Taxis International Taxi TX1 Range

L06
Fiche 1

Body Electric
Starter Motor
Starter Motor

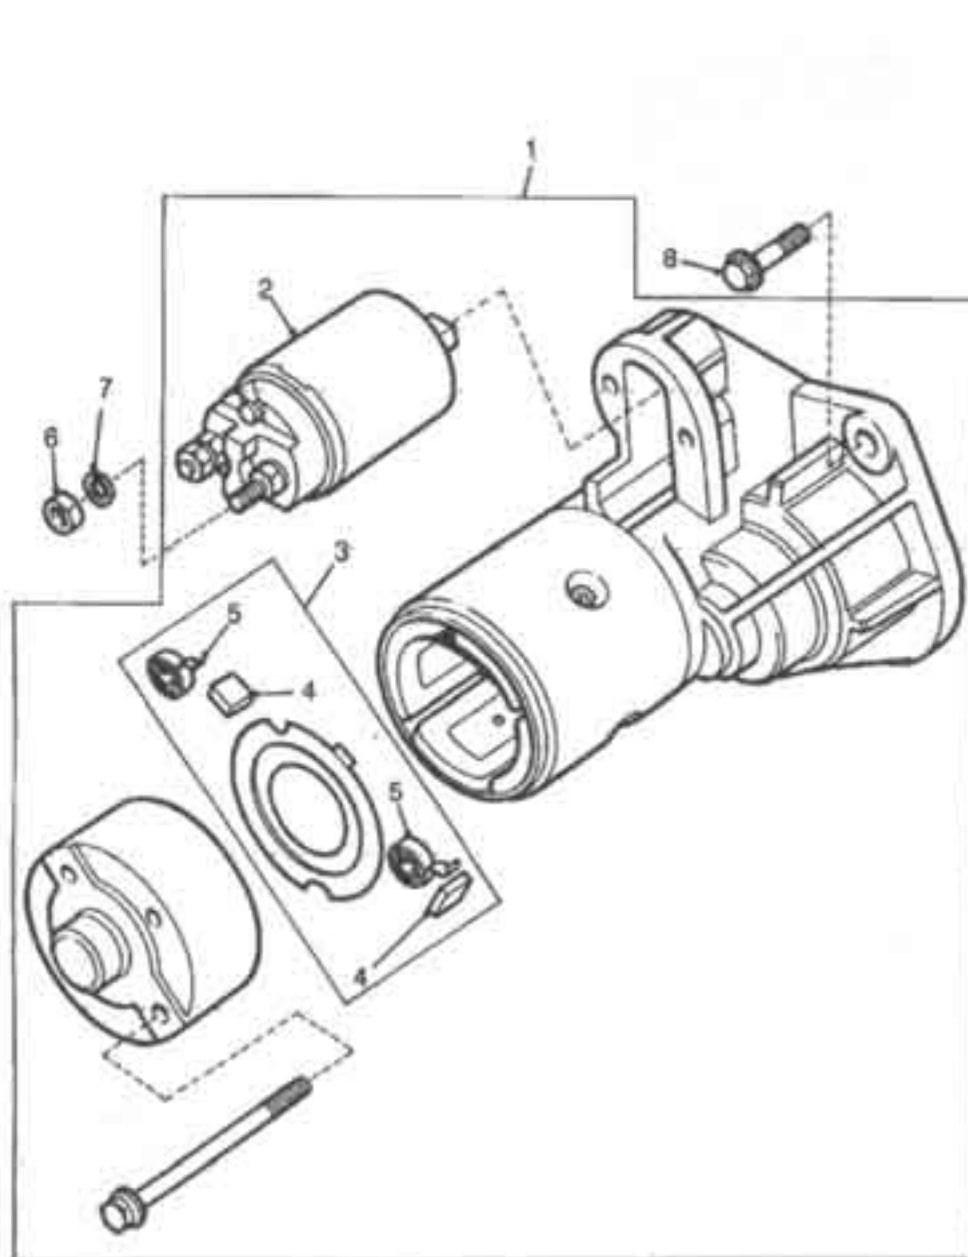

Illus Part Number

- 1 605091
- 2 800482
- 3 800471
- 4 800469
- 5 800472
- 6 603281
- 7 603260
- 1 601541E
- 2 800482
- 3 800471
- 4 800469
- 5 800472
- 6 603281
- 7 603260
- 8 603259

Description

- MOTOR-STARTER ENGINE-NEW..... 1
- Solenoid starter motor..... 1
- KIT-BRUSH STARTER MOTOR 1
- Brush-starter motor 4
- Spring..... 4
- Nut..... 1
- Washer-spring 1
- MOTOR-STARTER ENGINE-RECONDITIONED..... 1
- Solenoid starter motor..... 1
- KIT-BRUSH STARTER MOTOR 1
- Brush-starter motor 4
- Spring..... 4
- Nut..... 1
- Washer-spring 1
- Bolt..... 2

Quantity

Change Point

Remarks

..... Diesel


London Taxis International Taxi TX1 Range

L07

Fiche 1

Body Electrics
Ignition
Starting System-Glow Plugs

illus	Part Number	Description	Quantity	Change Point	Remarks
1	800411	Resistor.....	1		
2	600208	Electronic control unit-glow plug timer.....	1		Non EGR
3	S616HEX	Setscrew-ecu to bracket-M6 x 16.....	2		
4	WS6H	Washer-spring-M6.....	2		
5	WPN6L	Washer-plain-M6.....	2		
6	600210	Relay-glow plug.....	2	To (V) WC 102766	
6	609659	Relay-glow plug.....	2	From (V) WC 102767	
7	S612HEX	Setscrew-relay to bracket-M6 x 12.....	2		
8	WS6H	Washer-spring-M6.....	2		
9	800415	Plug-heater ignition-O.E.....	4		
9	801513	Plug-heater ignition-LTI approved.....	4		
10	800416	Plate-glow plug connector.....	1		
11	800417	Nut.....	4		
12	801060	Washer.....	4		
13	801072	Washer.....	4		

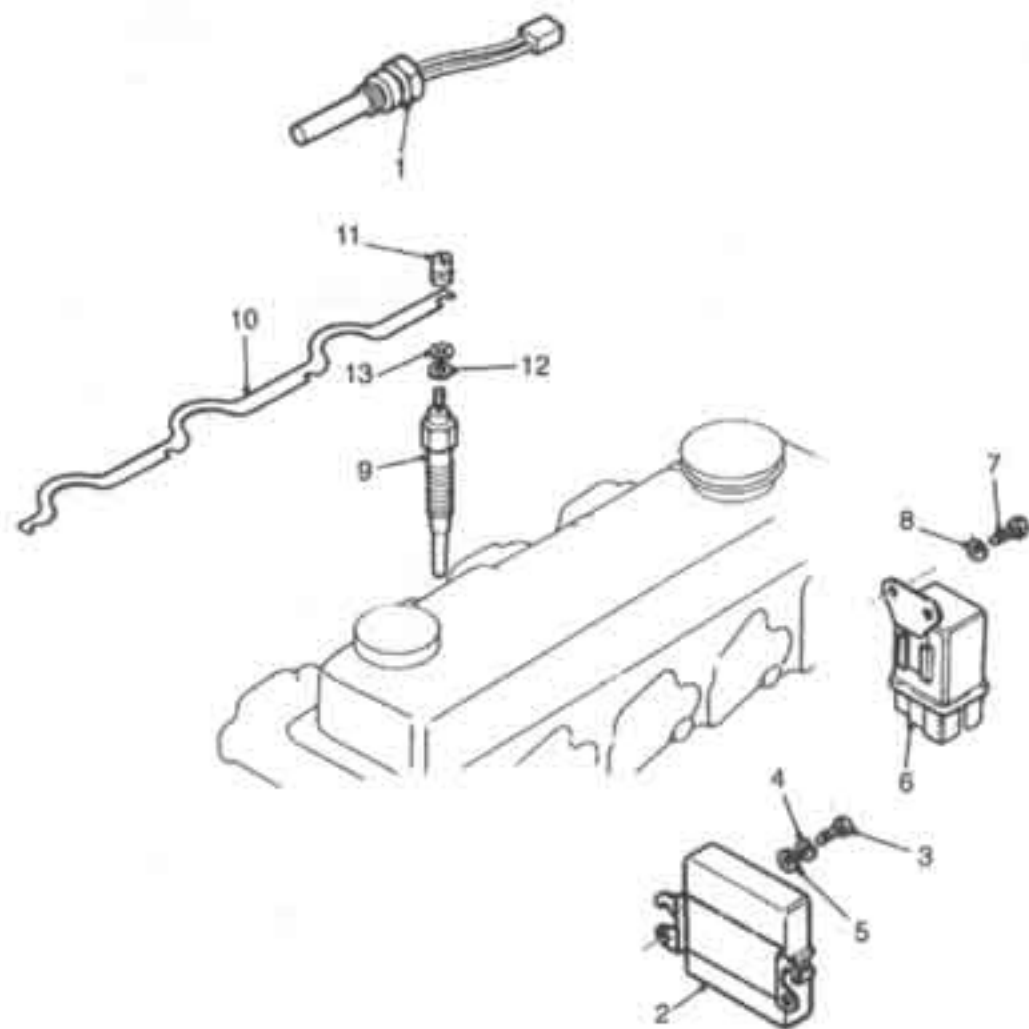




London Taxis International Taxi TX1 Range

L08

Fiche 1

Body Electrics
Fuse Box, Relays and ECUs
Fuse Block, Relays and ECUs Interior

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	608346	Bracket assembly-fuse box mounting	1	To (V) WC 102766	Non EGR
1	609392	Bracket assembly-fuse box mounting-RHD	1	From (V) WC 102767	EGR
2	S616HEX	Setscrew-moulding to bulkhead-M6 x 16	2		
3	WS6H	Washer-spring-M6	2		
4	WPN6L	Washer-plain-M6	2		
5	900540	Bracket-fuse box mounting	1	Note (1)	
6	900541	Fuseblock	1	Note (1)	
	TXE863	Fusebox-c/w connectors	1		
	S440CSK	Setscrew-fusebox	3		
	610892	Fuse-5 amp	A/R		
	900109	Fuse-10 amp	A/R		
	900110	Fuse-15 amp	A/R		
	900111	Fuse-20 amp	A/R		
	900112	Fuse-25 amp	A/R		
7	604407	Relay-door locking-4 pin	1		
8	603395	Relay-door locking-5 pin	1		
9	604407	Relay-accessory circuit control-4 pin	1		
10	604407	Relay-fog lamps front-4 pin	1		
11	604407	Relay-fog lamps rear-4 pin	1		
	610037	Control unit-rear fog-LHD	1		
12	606885	Electric control unit assembly-courtesy light drivers	1		
13	606885	Electric control unit assembly-courtesy light passengers	1		
14	606602	Electronic control unit-lights on reminder	1	To (V) WC 102766	Non EGR
15	606531	Control unit-intermittent wipe front	1		

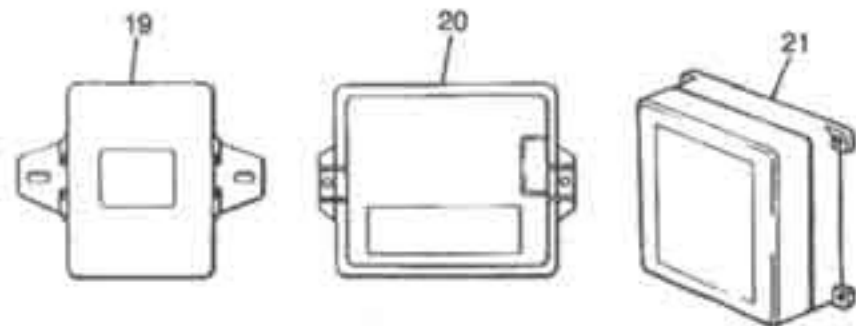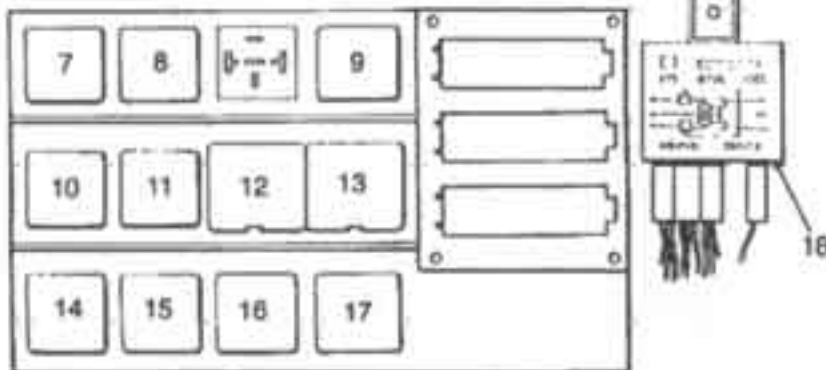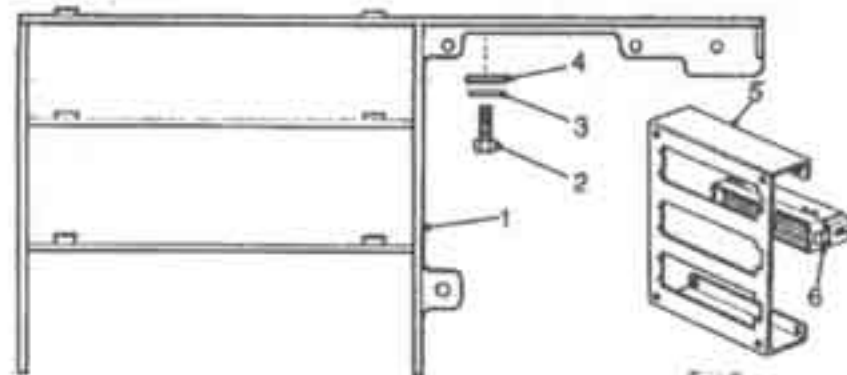

LT10175C

CHANGE POINTS:
(1) From (V) WC 102767


London Taxis International Taxi TX1 Range

L09

Fiche 1

Body Electrics
Fuse Box, Relays and ECUs
Fuse Block, Relays and ECUs Interior


Illus	Part Number	Description	Quantity	Change Point	Remarks
	16 606533	Electric control unit assembly-direction indicator..... 1 and hazard..... 1	1		
	17 600414	Electric control unit assembly-heated rear window... 1	1		
	S410PAN	Setscrew-relay base-M4 x 10..... 6	6		
	WPN4H	Washer-plain-M4..... 6	6		
	18 607847	Electric control unit assembly..... 1	1		
	S616PAN	Setscrew-ECU to bracket-M6 x 16..... 2	2		
	WS6H	Washer-spring-M6..... 2	2		
	WPL6H	Washer-plain-M6..... 2	2		
	19 600208	Electronic control unit-glow plug timer..... 1	1		Non EGR
	S616HEX	Setscrew-control unit to bracket-M6 x 16..... 2	2		
	WS6H	Washer-spring-M6..... 2	2		
	WPN6L	Washer-plain-M6..... 2	2		
	20 602700	Electric control unit assembly..... 1	1		
	S410PAN	Setscrew-ECU to bulkhead-M4 x 10..... 2	2		
	WS4H	Washer-spring..... 2	2		
	602721	Screw-sealing plate IDDS..... 1	1		
	21 606902	Control unit-immobiliser-c/w radio key..... 1	1	To (V) WC 102766	
	609393	Control unit-immobiliser..... 1	1	From (V) WC 102767	
	609660	Module-electronic engine-electric control unit..... 1	1		Manual EGR
	609661	Module-electronic engine-electric control unit..... 1	1		Automatic EGR

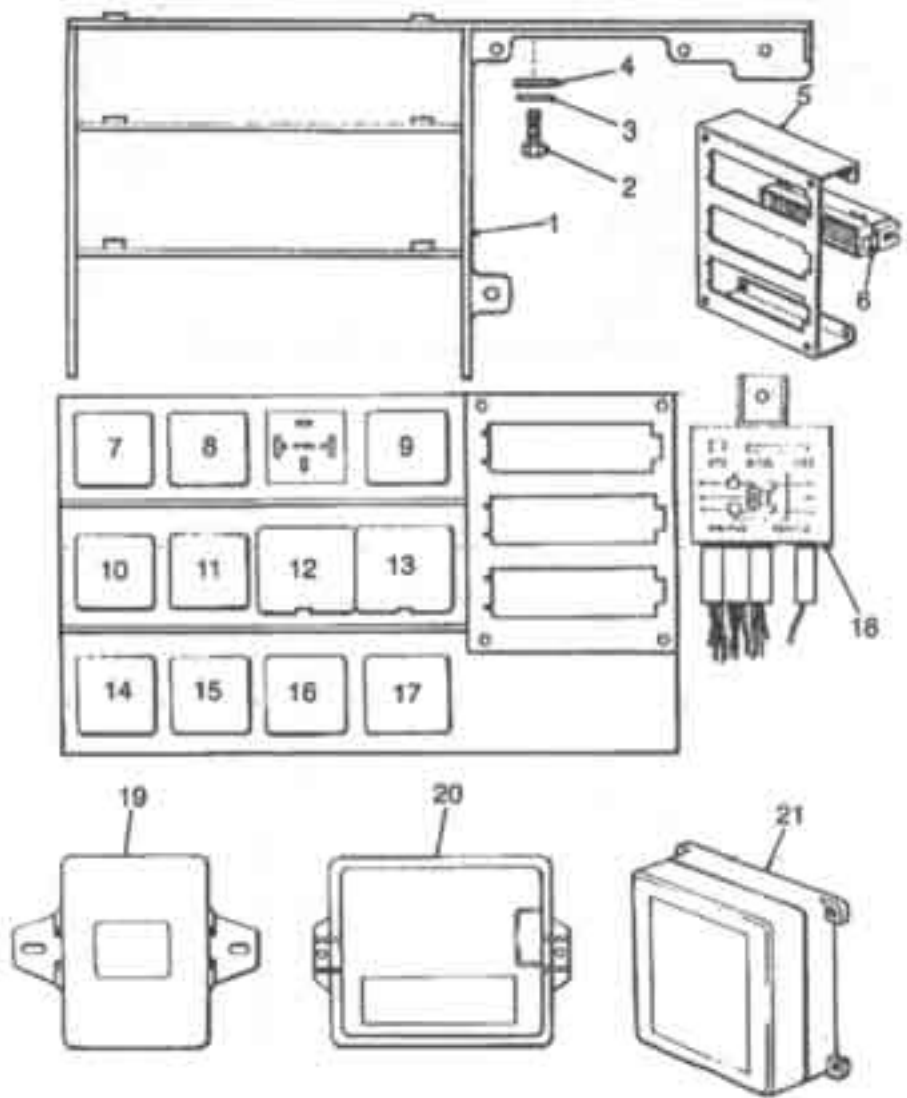

London Taxis International Taxi TX1 Range

L10
Fiche 1

Body Electrica
Fuse Box, Relays and ECUs
Relays and ECU Exterior

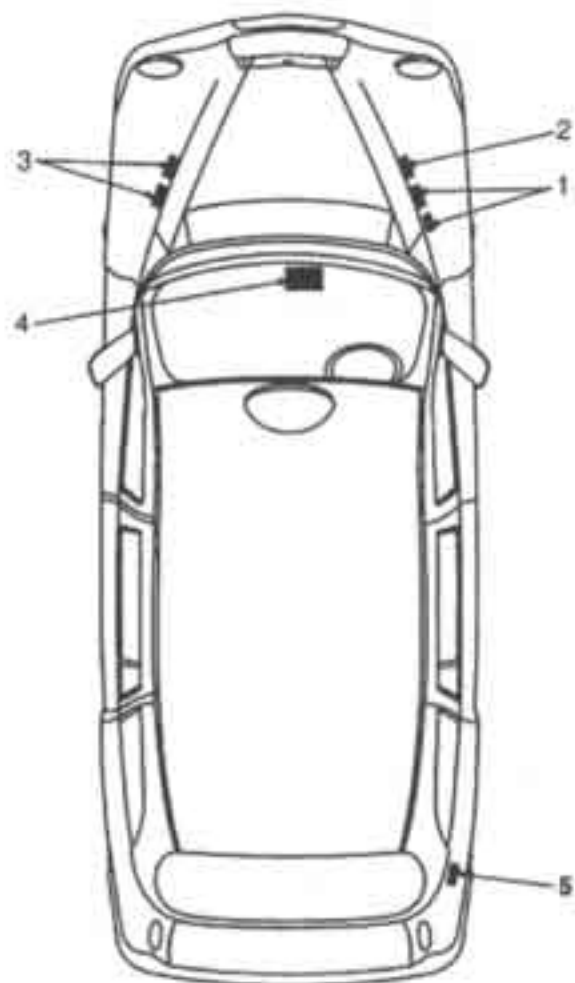

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	600210	Relay-glow plug	2	To (V) WC 102766	Automatic
1	609659	Relay-glow plug	2	From (V) WC 102767	Automatic
2	604407	Relay-inhibitor gearbox-4 pin	1	Automatic
	S410PAN	Setscrew-relay base-M4 x 10	1		
	WPL4H	Washer-plain-M4	1		
3	604407	Relay-air conditioning-4 pin	2		
	S410PAN	Setscrew-relay base-M4 x 10	2		
	WPL4H	Washer-plain-M4	2		
4	608933	Amplifier-intercom-back face of heater	NLA	Use 610614.
4	610614	Amplifier-intercom-c/w radio mute	1		
5	606532	Electronic control unit-rear wash wipe	1		
	S410PAN	Setscrew-relay base to squab support-M4 x 10	1		


London Taxis International Taxi TX1 Range

L11

Fiche 1

Body Electrics
Wiring
Engine Harness

Illus	Part Number	Description	Quantity	Change Point	Remarks
	1 607160	Harness-engine compartment-automatic	1	Note (1)	Non EGR
	1 607161	Harness-engine compartment-manual	1		
	1 609303	Harness-engine compartment-automatic-RHD	1	Note (2)	EGR
	1 609304	Harness-engine compartment-manual-RHD	1		
	1 610083	Harness-engine compartment-automatic	1	Note (3)	
	1 610084	Harness-engine compartment-manual	1	Note (3)	
	1 610541	Harness-engine compartment-automatic	1	Note (4)	Automatic
	1 610542	Harness-engine compartment-manual	1	Note (4)	Manual
	S410PAN	Setscrew-M4 x 10	1		
	WPN4H	Washer-plain-M4	1		
	607843	Clip-pipe	1		
	608858	Clip-p-10mm	1		
	S825HEX	Setscrew-M8 x 25	1		
	WS8H	Washer-spring-M8	1		
	2 607646	Harness air conditioning	1	To (V) WC 102766	Non EGR
	2 609384	Harness air conditioning-RHD	1	From (V) WC 102767	EGR
	2 610085	Harness air conditioning	1	LHD

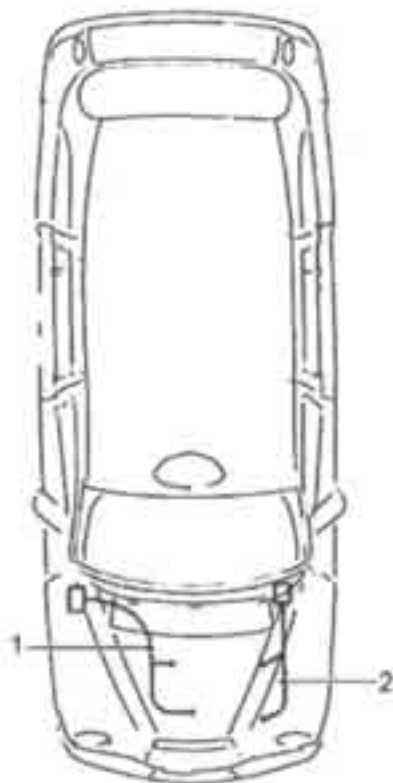


CHANGE POINTS:

- (1) To (V) WC 102766
- (2) From (V) WC 102767 To (V) WC 103579
- (3) From (V) WC 103580 To (V) XC 107214
- (4) From (V) XC 107215

London Taxis International Taxi TX1 Range

L12
Fiche 1

Body Electrics
Wiring
Main & Rear Harness

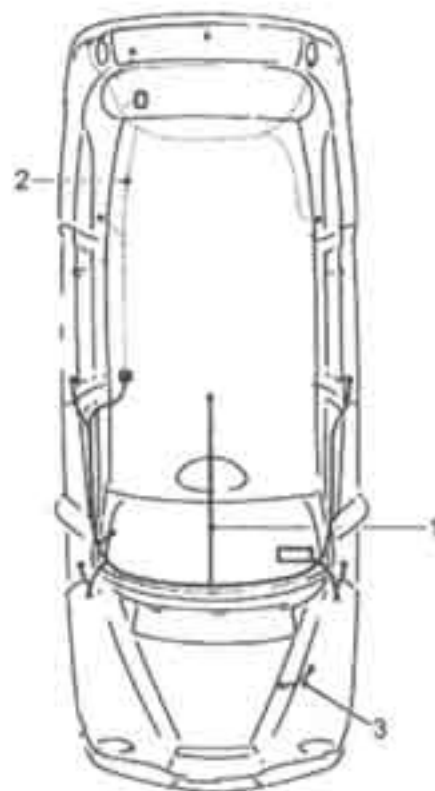

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	607151	Harness main	1	Note (1).....	RHD Non EGR
1	609300	Harness main-RHD	1	Note (2).....	RHD EGR
1	610255	Harness main-RHD	1	RHD
1	609450	Harness main-LHD	1	LHD
	S616HEX	Setscrew-earth connection-M6 x 16	3		
	WS6H	Washer-spring-M6	3		
	S410PAN	Setscrew-relay base-M4 x 10	6		
	WPN4H	Washer-plain-M4	6		
2	607152	Harness rear-RHD	1	RHD
2	609451	Harness rear-LHD	1	LHD
	WET6	Washer-starlock-rear Harness To Boot-M6	2		
	S410PAN	Setscrew-relay base to squab support-M4 x 10	1		
	WPN4H	Washer-plain-M4	1		
3	608175	Harness-link-brake sensor.....	1	Note (3)	
3	610152	Harness-link-brake sensor.....	1	Note (4)	
	607923	Clip-p-16mm	1		
	S516PAN	Setscrew-M5 x 16.....	1		
	8165	Nut-serrated-M5.....	1		

CHANGE POINTS:
 (1) To (V) WC 102766
 (2) From (V) WC 102767
 (3) To (V) XC 104199
 (4) From (V) XC 104200

London Taxis International Taxi TX1 Range

L13
Fiche 1

Body Electrics
Wiring
Facia & Roof Harness

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	607153	Harness-roof-RHD.....	1	Note (1)	
1	609452	Harness-roof.....	1	Note (2).....	RHD
1	609452	Harness-roof.....	1		LHD
2	607154	Harness facia-RHD.....	1	Note (3)	
2	609385	Harness facia-RHD.....	1	Note (4)	
2	609960	Harness facia-RHD.....	1	Note (5)	
2	610544	Harness facia-RHD.....	1	Note (6).....	RHD
2	609453	Harness facia-LHD.....	1		
	8091	Screw-No 8 x 1/2.....	7		
	S616HEX	Setscrew-earth connection-M6 x 16.....	3		
	WS6H	Washer-spring-M6.....	3		
	WET6	Washer-starlock-M6.....	3		



CHANGE POINTS:

- (1) To (V) XC 105172
- (2) From (V) XC 105173
- (3) To (V) WC 102766
- (4) From (V) WC 102767 To (V) WC 103217
- (5) From (V) WC 103218 To (V) XC 107214
- (6) From (V) XC 107215

London Taxis International Taxi TX1 Range


L14

Fiche 1

Body Electrics Wiring Underbonnet, Door & Aerial Harness



Illus	Part Number	Description	Quantity	Change Point	Remarks
1	607158	Harness-engine compartment-LH.....	1] Note (1).....] Non EGR
2	607159	Harness-engine compartment-RH.....	1		
1	609301	Harness-engine compartment-LH-RHD.....	1	Note (2).....	EGR
1	610546	Harness-engine compartment-LH-RHD.....	1	Note (3).....	RHD EGR
2	609302	Harness-engine compartment-RH-RHD.....	1	Note (2).....	EGR
2	610547	Harness-engine compartment-RH-RHD.....	1	Note (3).....	RHD EGR
1	609454	Harness-engine compartment-LH-LHD.....	1	Note (4).....	
1	610633	Harness-engine compartment-LH-LHD.....	1	Note (3).....	LHD
2	609455	Harness-engine compartment-RH-LHD.....	1	Note (4).....	
2	610634	Harness-engine compartment-RH-LHD.....	1	Note (3).....	LHD
HARNES FRONT DOOR					
3	608455	RH-RHD.....	1	Note (5).....	RHD
3	608456	LH-RHD.....	1	Note (5).....	RHD
3	610211	RH.....	1	Note (6).....	RHD
3	610212	LH.....	1	Note (6).....	RHD
3	610356	RH.....	1	Note (7).....	
3	610357	LH.....	1	Note (7).....	
4	610090	Harness rear door.....	2		RHD
4	610090	Harness rear door.....	2		LHD
5	607649	Lead-extension aerial.....	1		RHD
	610096	Harness-link-hire sign-LHD.....	1		LHD
	608460	Harness-fog lamp.....	NLA		
	610153	Harness-fog lamp.....	2		Use 610153.
	900381	Lead-link-washer bottle.....	1		

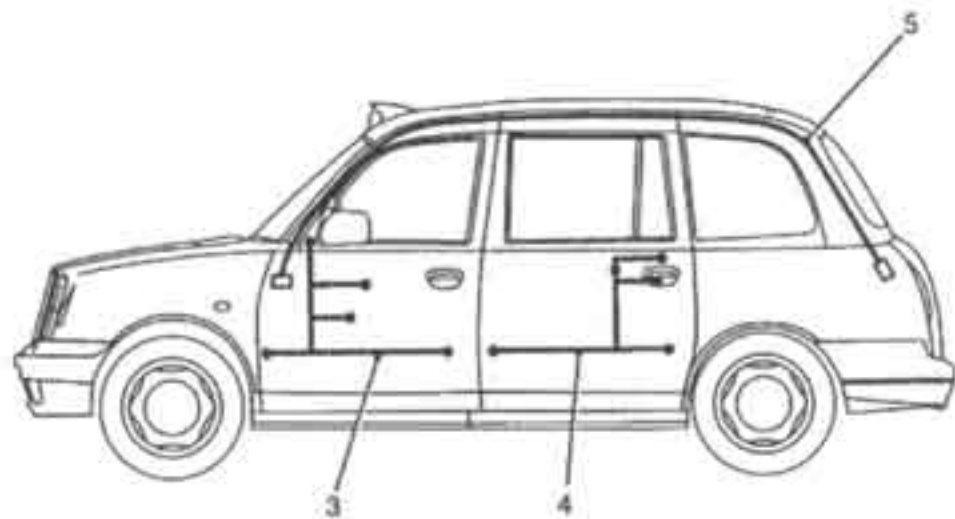

CHANGE POINTS:

- (1) To (V) WC 102766
- (2) From (V) WC 102767 To (V) XC 107214
- (3) From (V) XC 107215
- (4) To (V) XC 107214
- (5) To (V) XC 104310
- (6) From (V) XC 104311 To (V) XC 105629
- (7) From (V) XC 105630